



Runtime licence for operating the PVIS OPC Server on a PMIvisu or PMlopen. To connect a Pilz control system (PSS, SafetyBUS p, PNOZmulti, ...) Point-to-point via serial or Ethernet connection.